

# Architectural Door Accessories

**ASSA ABLOY**

## Pemko Door Bottoms


The global leader in  
door opening solutions

Applies to the following door bottom:

**211\_V, 211\_PK, 210\_V, 210\_PK, 220\_V, 220\_PK, 215\_V,  
215\_PK, 217\_V, 217\_PK, 216\_V, 216\_PK**

### Installation Instructions:

1. Measure, mark and trim door bottom shoe to full width of door. Trim seal 1/16" longer than trimmed door shoe at each end. Crimp ends to secure insert.
2. Notch both ends to clear stops.

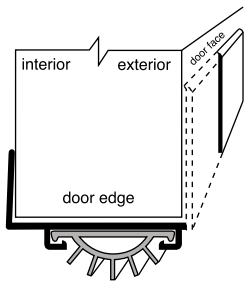

3. Slide door bottom shoe in place and close door. Position so that it makes light even contact with the threshold. Mark door in center of slotted holes.
4. Drill pilot holes in door at marks.
5. Secure door bottom shoe to door with supplied screws. Adjust to ensure light even contact with threshold.

### Tools Required:



### Testing/Ratings:

Gasketing material for fire doors intended for application to listed steel frames and/or classified steel covered composite type, and hollow metal type fire doors rated up to 3 hours; wood and plastic covered composite type fire doors rated up to 1-1/2 hours; and wood core type fire doors rated up to 20 minutes.

(Thresholds may or may not contain gasketing material).



[www.pemko.com](http://www.pemko.com)

MEMPHIS, TN USA    VENTURA, CA USA    VANCOUVER, BC CA    TORONTO, ON CA  
P: 800 824-3018    P: 800 283-9988    P: 877 535-7888    P: 877 535-7888  
F: 800 243-3656    F: 800 283-4050    F: 877 535-7444    F: 877 535-7444

Copyright © 2017 Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.  
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Company is prohibited.

DB3\_WEBINS  
Rev 2 - 03.07.17  
Page 1 of 1